

Disassembly of a bottom portion of an XO Laptop.

**Before disassembling the XO make sure you unplug the power adapter and remove the battery.**



Undo the five screws from the bottom of the battery compartment.



Flip the laptop over and rotate the screen 90° in either direction. You should now be able to remove the top panel by gently prying it up.



Remove the 4 screws that hold the green side edges of the laptop.



With the top panel removed you now have access to 4 screws that secure the LCD screen hinge. Remove all 4 screws and pull out the screen gently.



Disconnect the power cable marked above with the blue arrow.

Flip the laptop over and remove the back cover.



Disconnect the keyboard and touch pad cable.




You should now be able to separate the LCD screen from the keyboard assembly.






To further disassemble the keyboard. Remove the 8 screws that hold the green edges. And the 4 screw holding the keyboard in place.

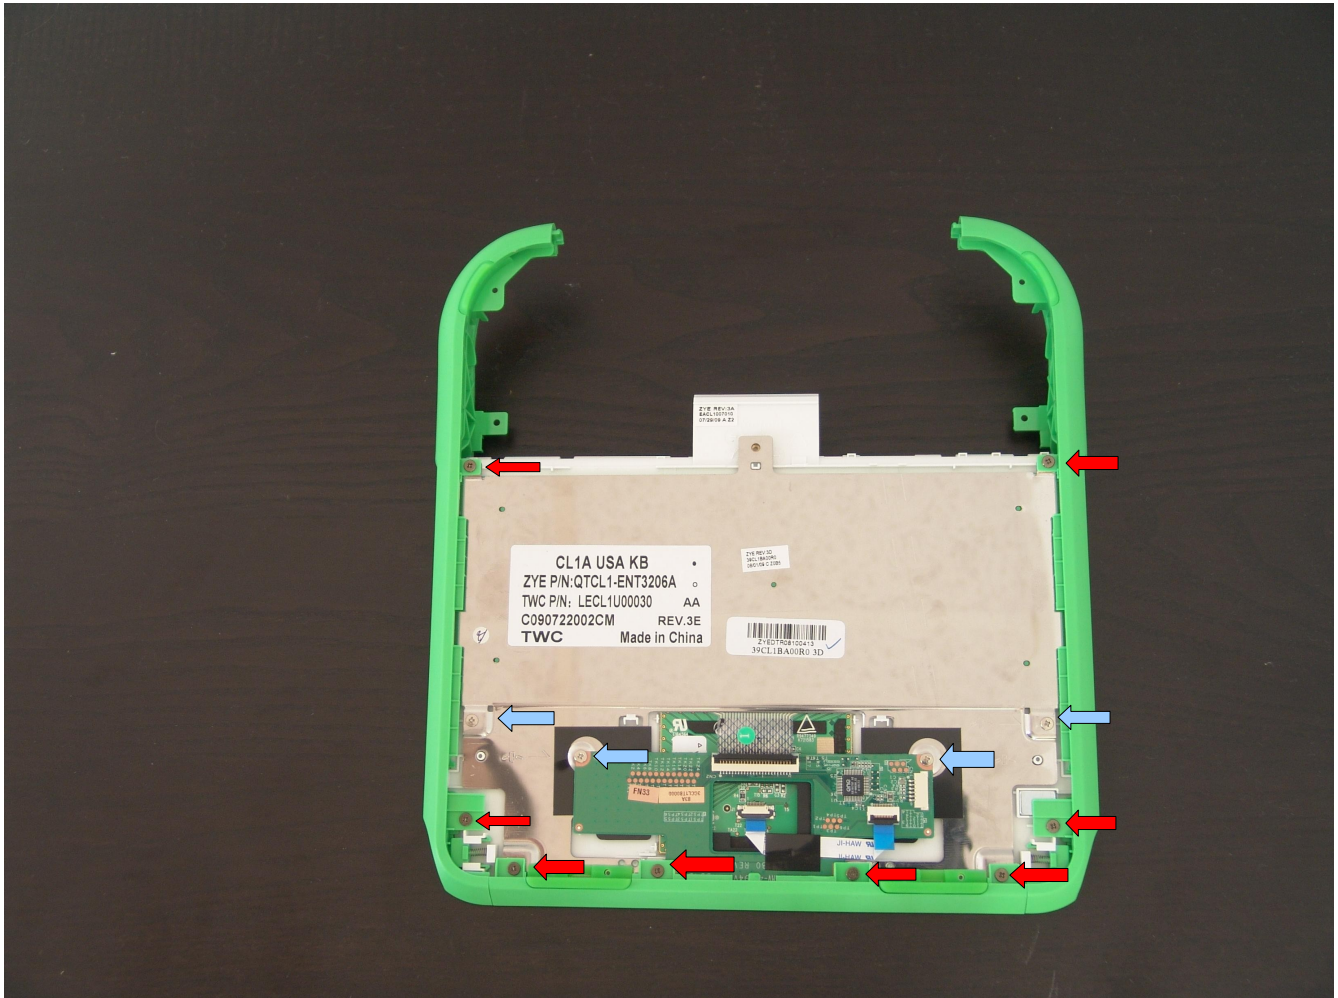



Remove the green plastic edges from the main unit.

Disconnect the keyboard and touch-pad cables.

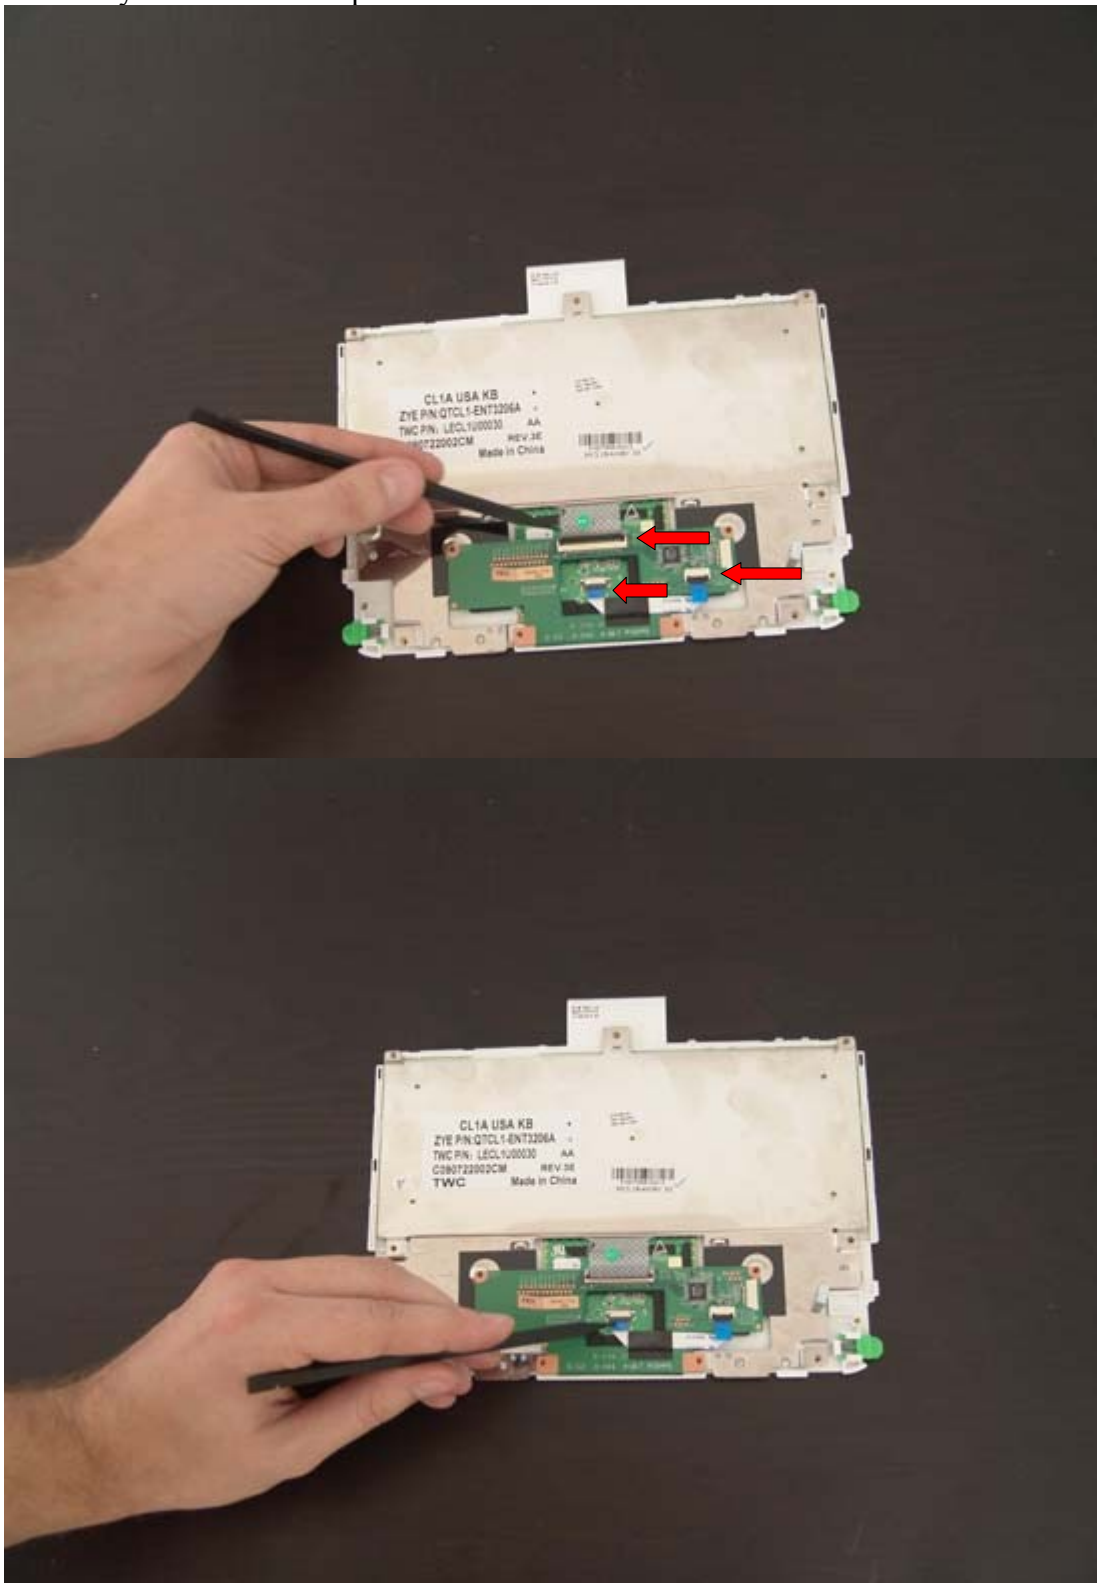


You should now be able to separate the inverter, keyboard and touch-pad with the faceplate.

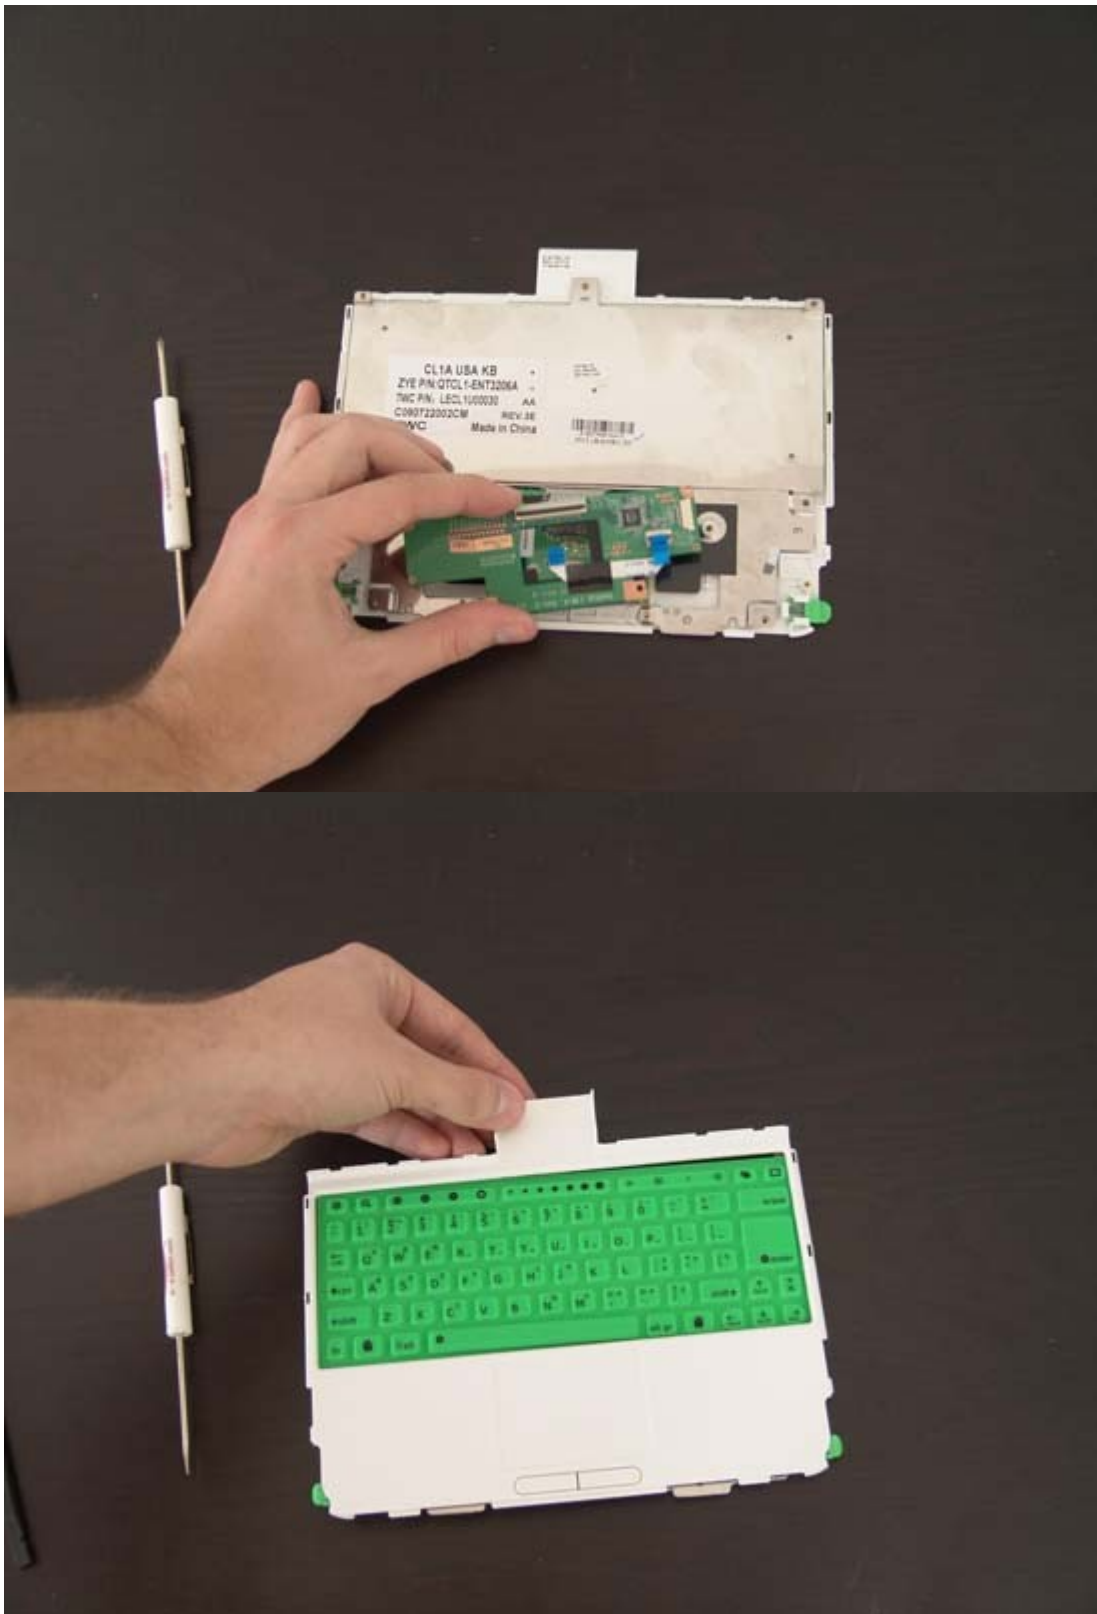

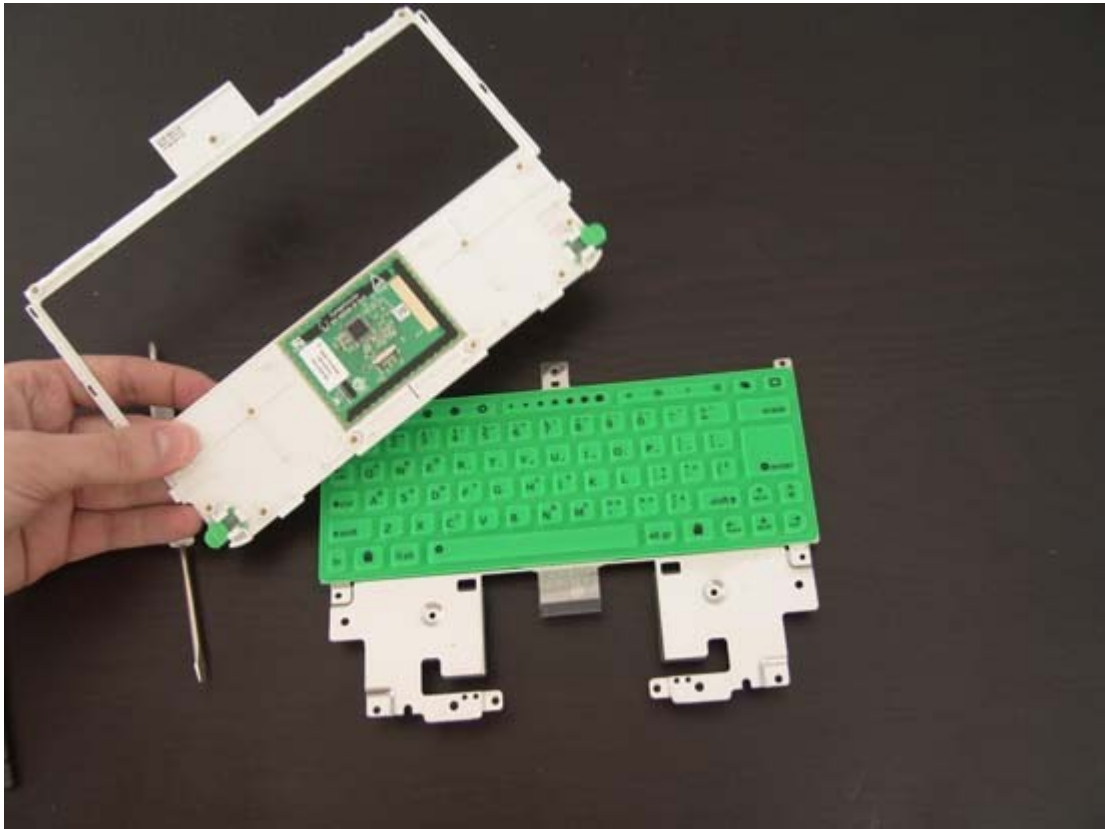

To reassemble the unit follow the above instructions in reverse order.


Line up and put together the keyboard, touch pad and inverter and reconnect the cables.

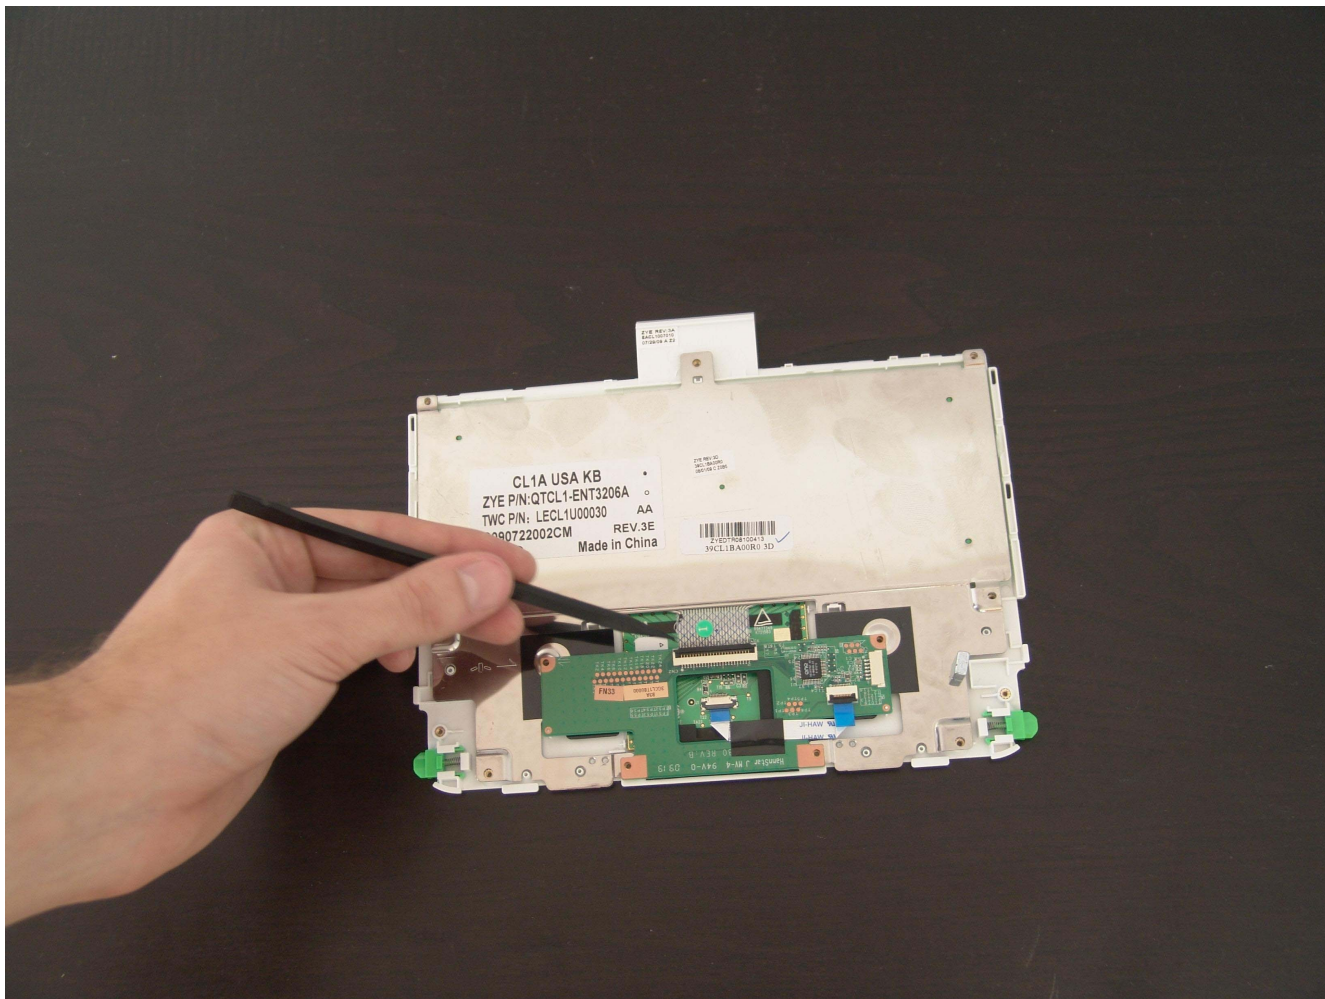

Replace the plastic green edges and all the screws holding them in place.



Flip the unit over and position the LCD screen over the keyboard.

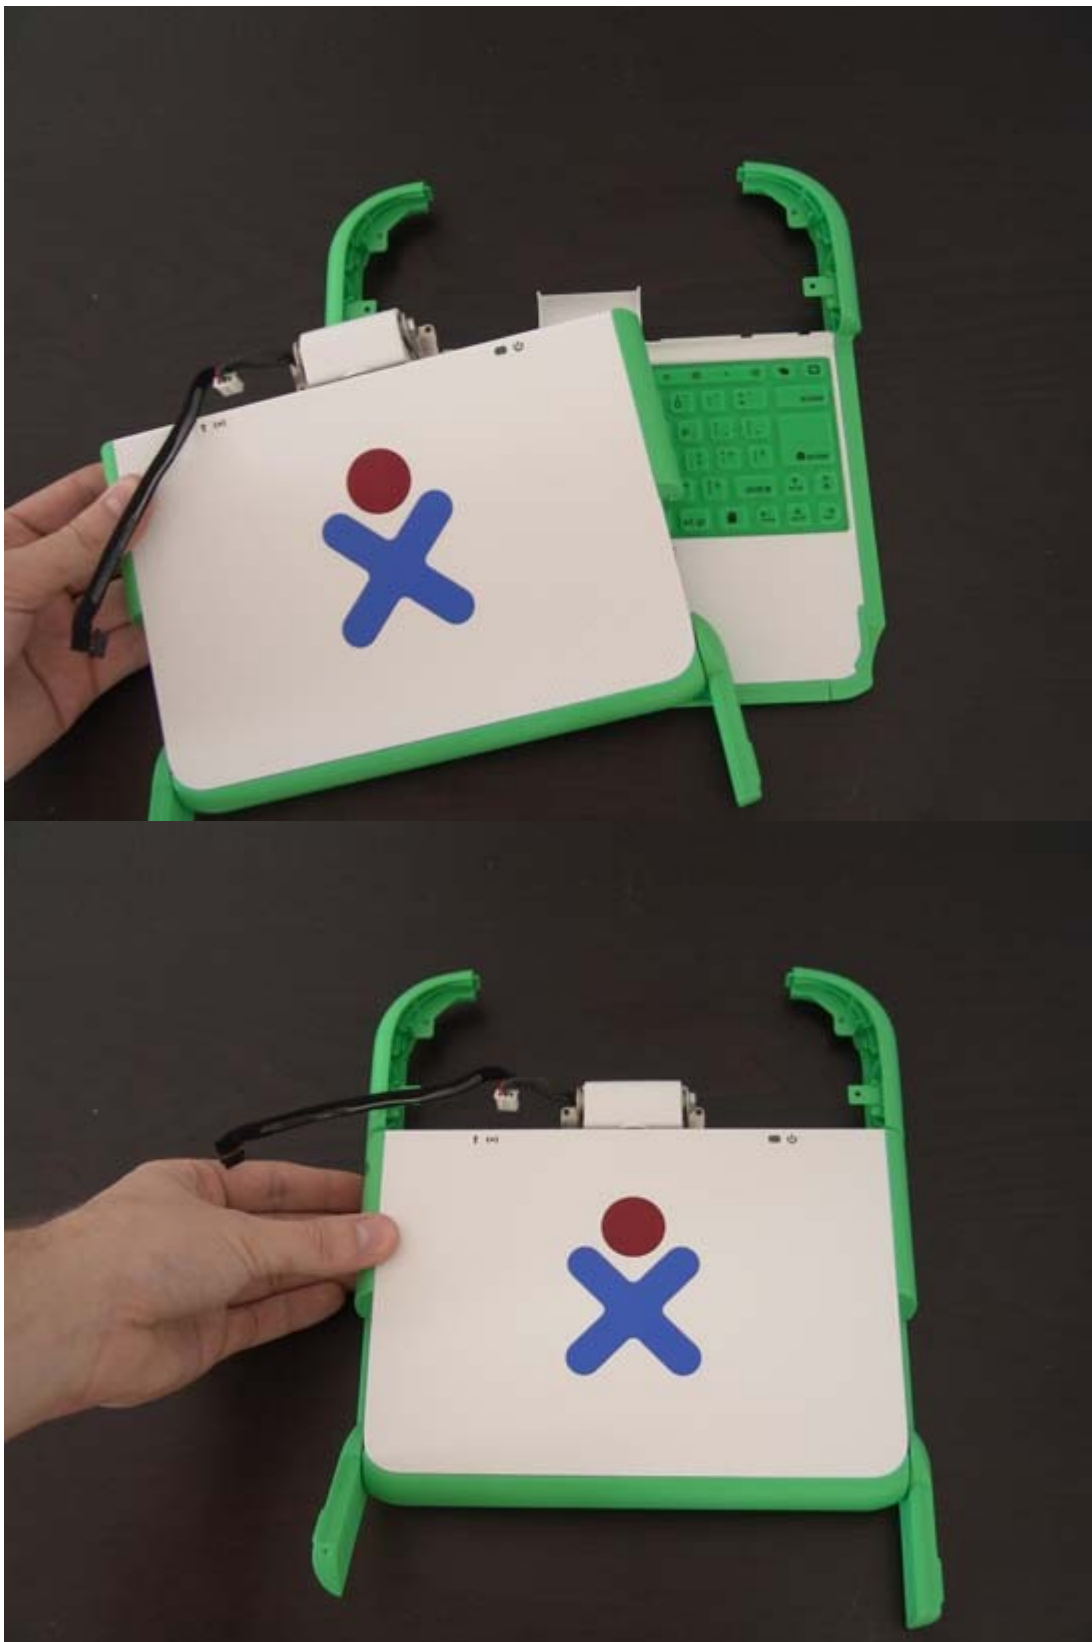


Flip the unit over again and re-attach the keyboard and touch pad cable.







Replace the bottom cover and the rest of the green edges around the handle.

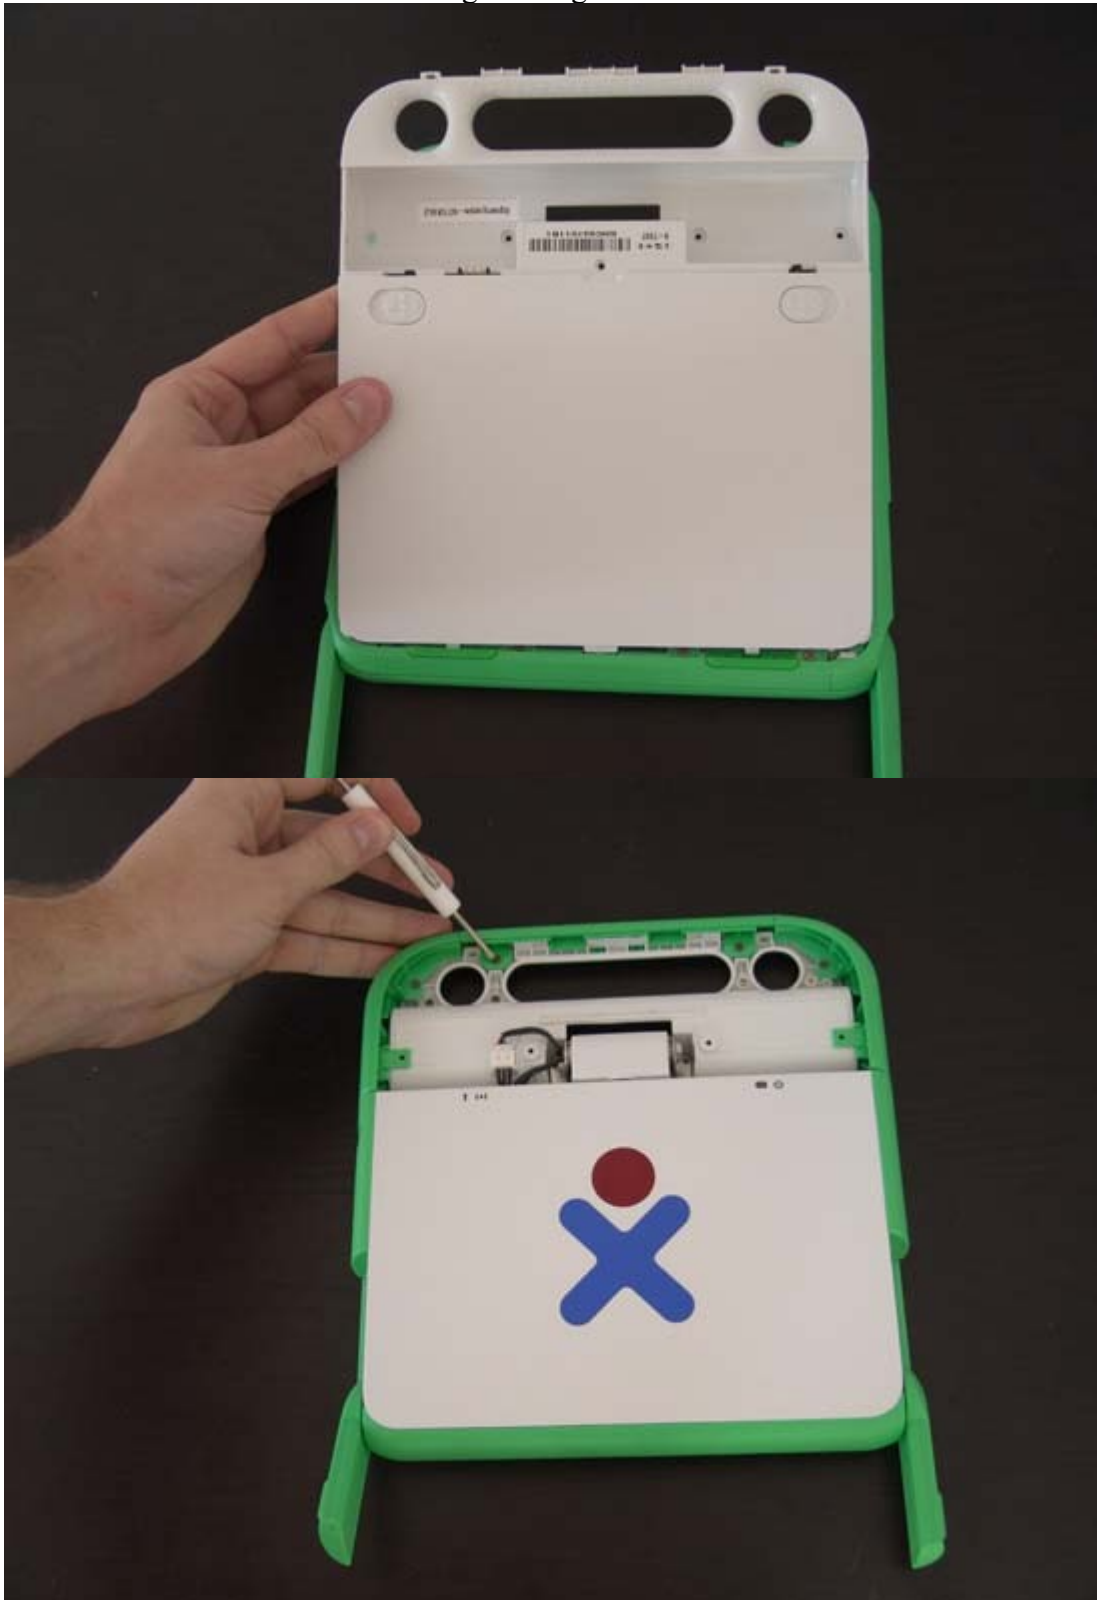

Flip the unit one more time and secure the LCD screen bracket with the four screws.

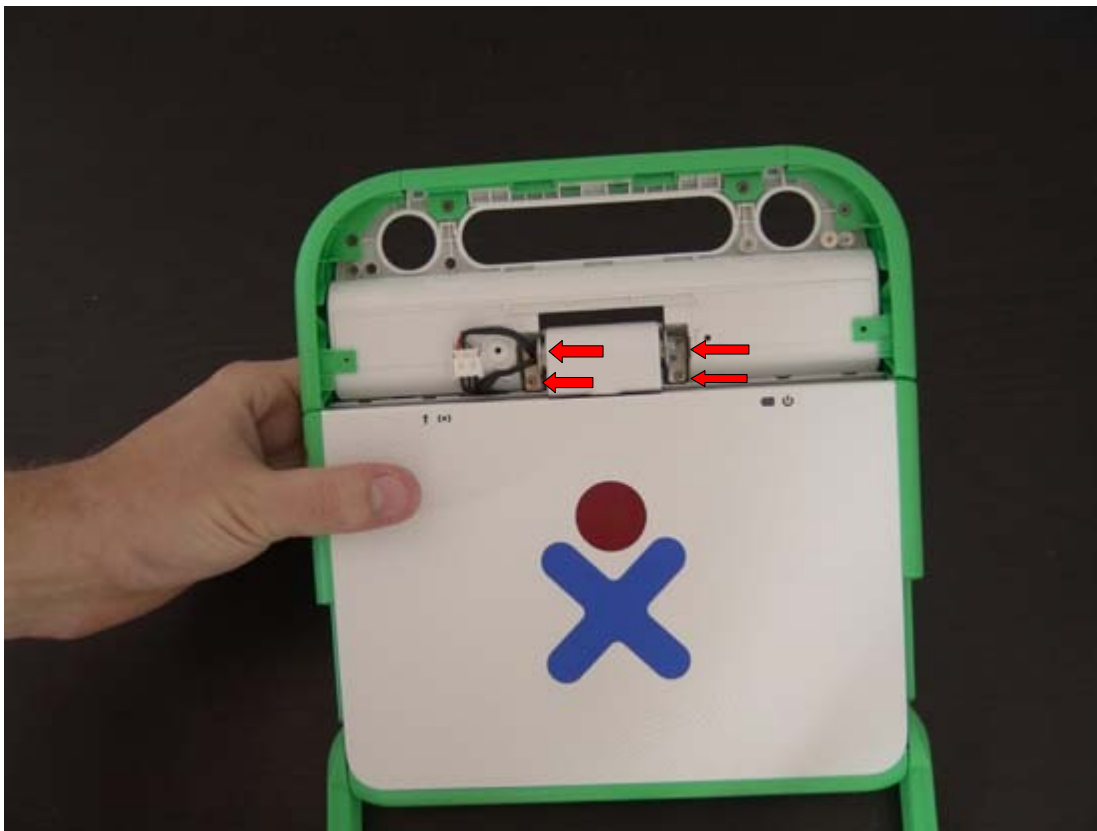

Open up and rotate the screen 90°, then replace the back cover.

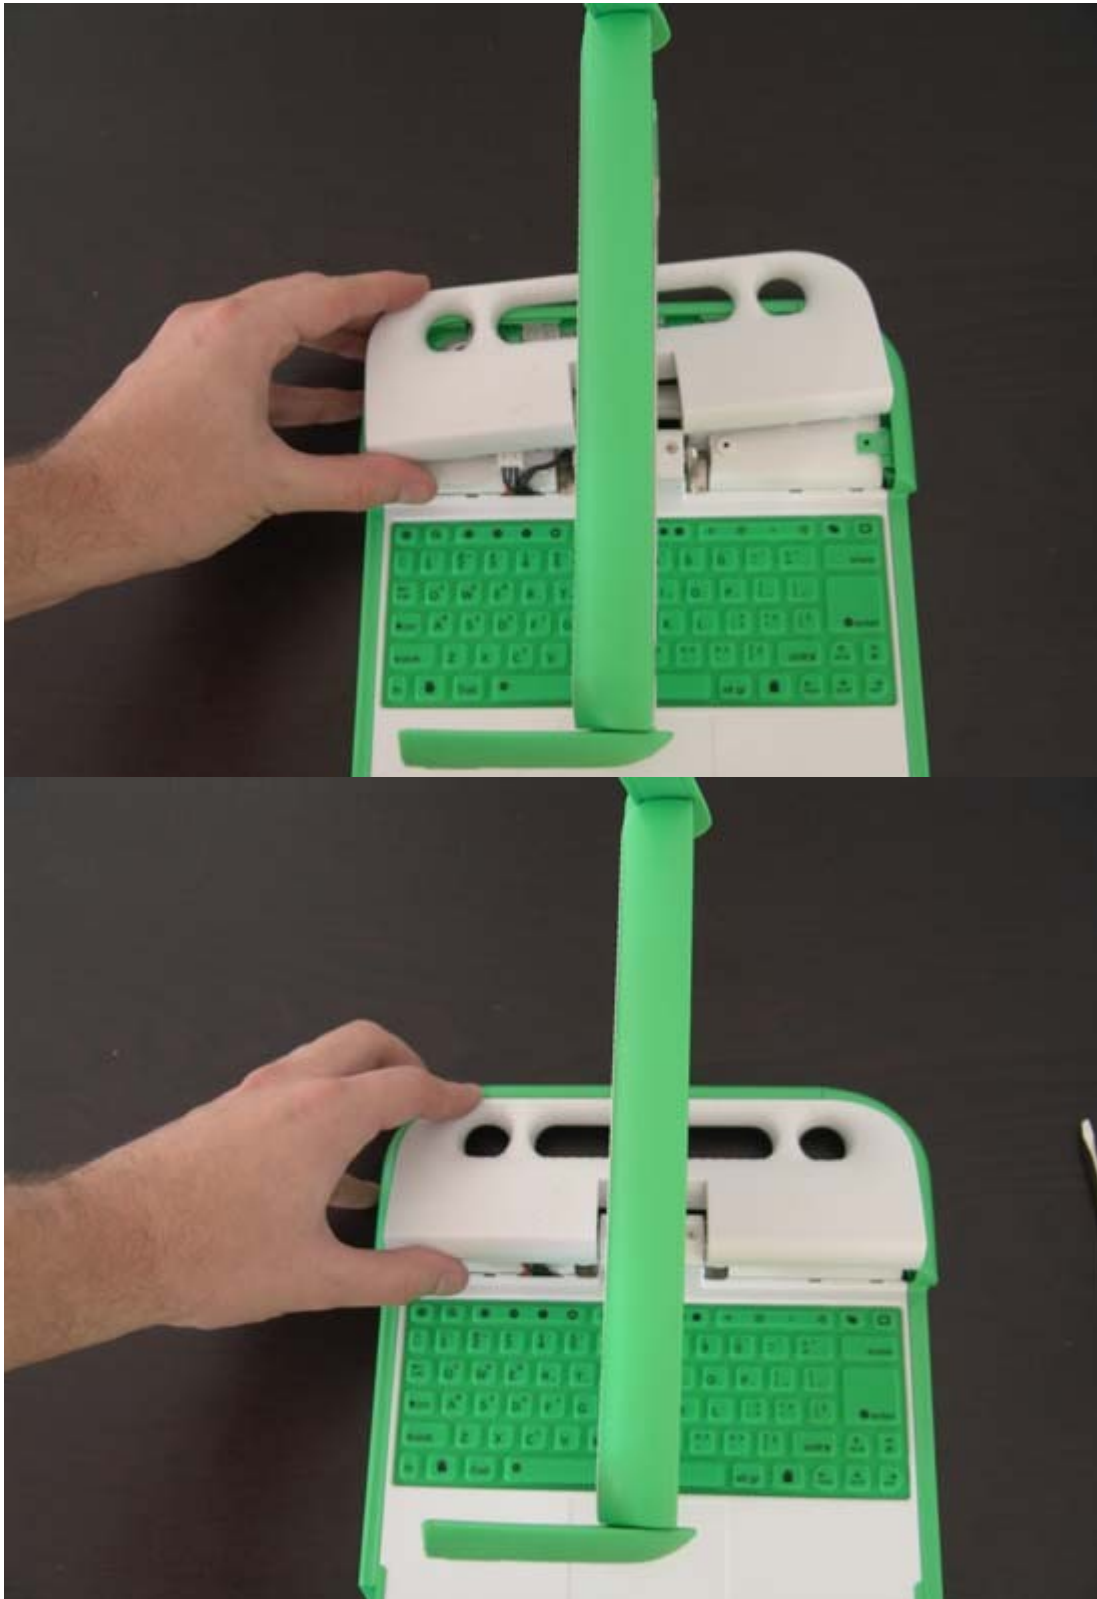

Replace the five screws in the battery compartment and then replace the battery.



By: Peter Domanski